

MOPAR**MOPAR**


INSTRUCTIONS FOR INSTALLING

MOPAR ELECTRIC WINDOW LIFT SAFETY SWITCH**PART NO. 2197 405**

1960 PLYMOUTH, DODGE, DE SOTO, CHRYSLER AND IMPERIAL

FOR TWO (2) REAR WINDOW CONTROL, ONLY REMOVE BLACK AND WHITE WIRES FROM WINDOW LIFT CIRCUIT BREAKER. LEAVE TAN AND YELLOW WIRES IN PLACE.

FOR TWO (2) REAR WINDOW AND FRONT RIGHT WINDOW CONTROL, REMOVE YELLOW, BLACK AND WHITE WIRES FROM WINDOW LIFT CIRCUIT BREAKER. LEAVE TAN WIRE IN PLACE

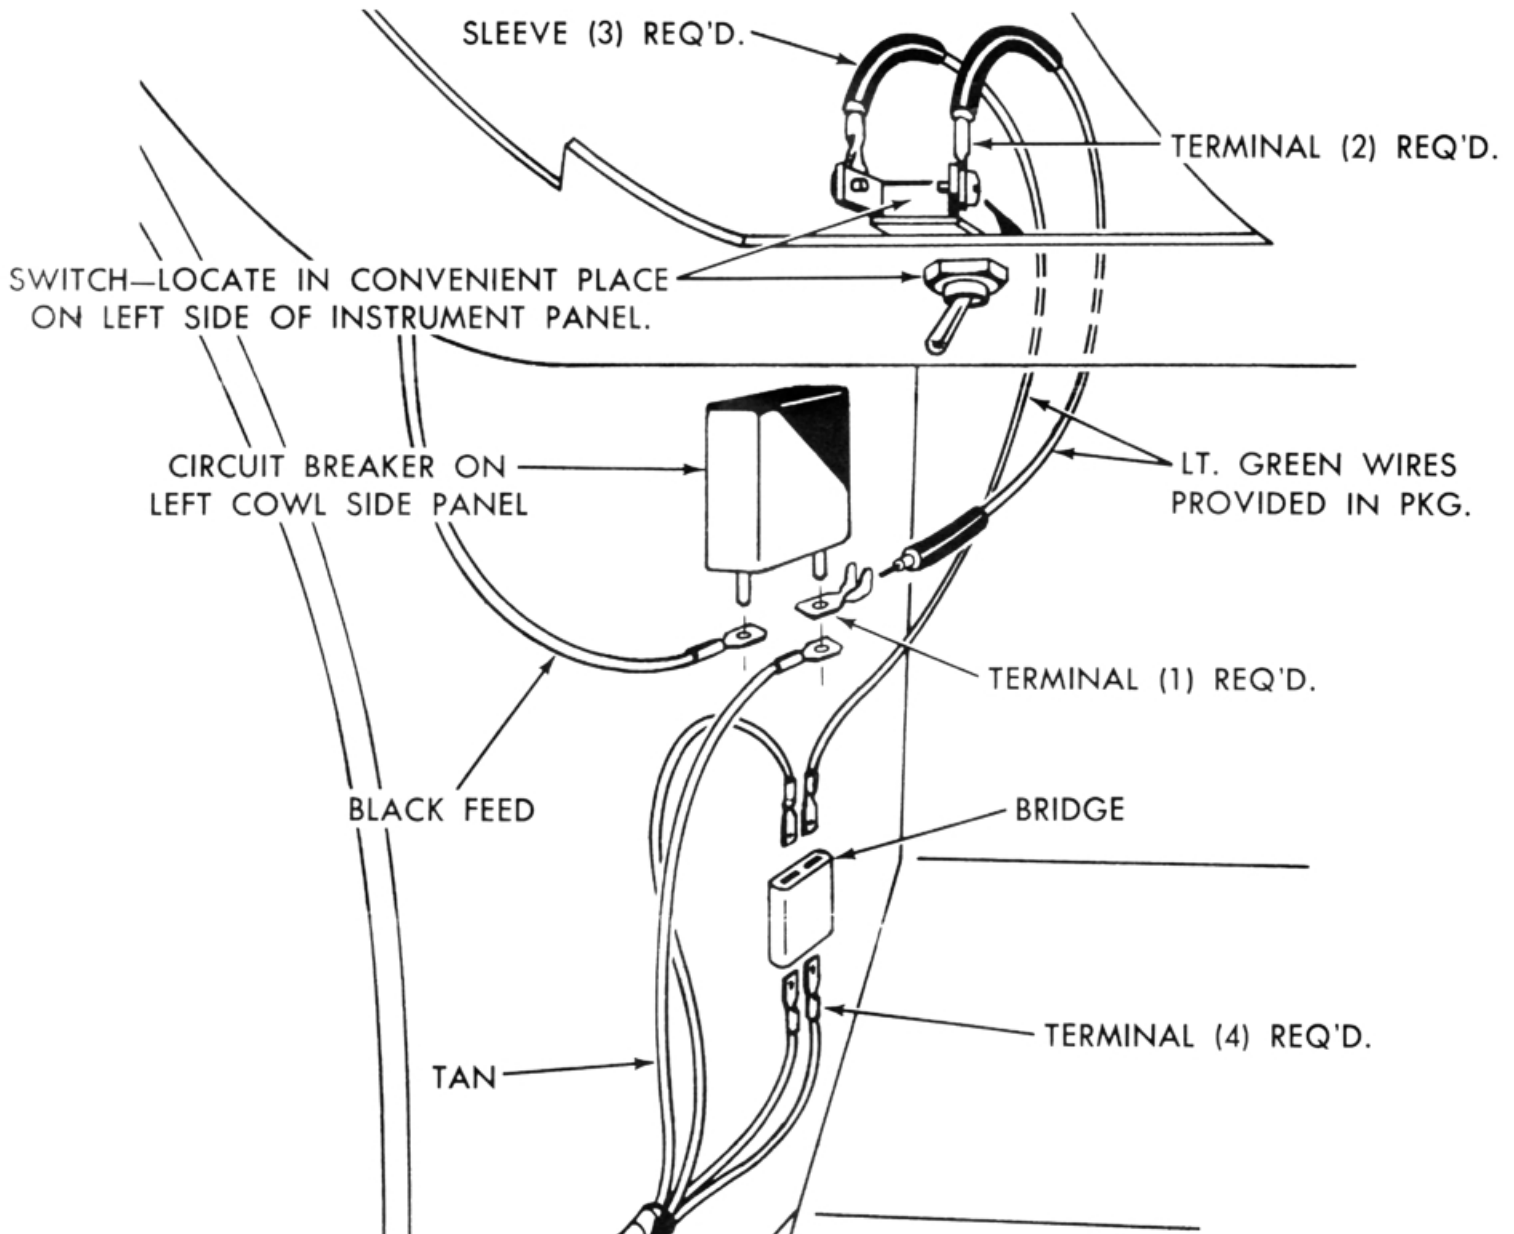

CHRYSLER CORPORATION

SERVICE PARTS AND ACCESSORIES SUPPLY DIVISION

DETROIT 31, MICHIGAN

PRINTED IN U.S.A.